


STEP 1 – Place your pond upside down on the ground and trace the perimeter.



STEP 2 – Dig a hole that is 5-6" larger and deeper than your pond.

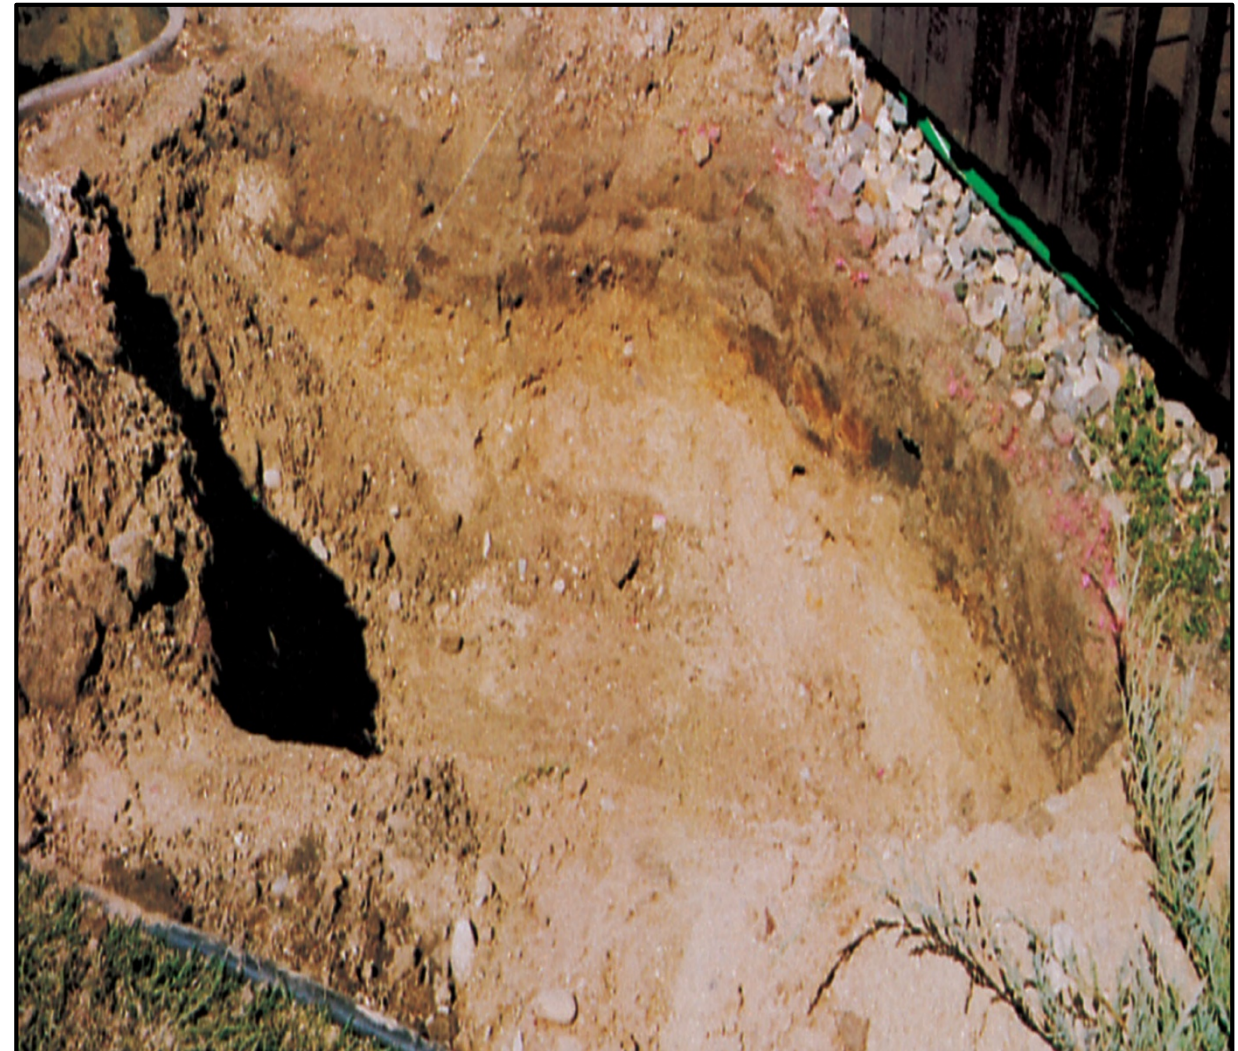

STEP 3 – Add 4” of sand on the bottom of the hole, bed the pond and then make it level.

STEP 4 – Fill the pond while you backfill with loose dirt, trying to finish at the same time.



STEP 5 - Landscape and enjoy!

